

 
## Motor Programming for Sheer Horizontal Shades

**1: SETTING UP THE MOTOR:** During the settings, the interval between two operations must be less than 6 seconds to keep the motor in the programming mode.

Press setting button on the motor for 2 seconds.



 


 
Motor will beep and jog once.

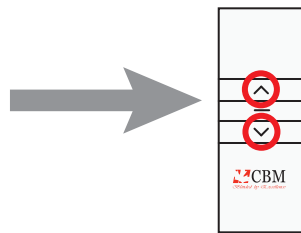
Press  for 2 seconds. Motor will jog and beep twice.



### 2. MOTOR ROTATION:

 
 
Press  or .

 
 
When pressing  or  shade should travel in the correct direction. If it travels in the opposite direction, press  +  key together for 2 seconds, shade will jog once and reverse direction.



 
 
Direction of rotation has been changed, proceed to Step 3.

 
 
### 3. SET UP/DOWN LIMITS:

Bring the shade to the desired UPPER limit. Pressing the  or  key will move the shade slightly, long press for continuous move.

Once the shade reaches the desired limit, press and hold  +  keys for 2 seconds.

 

Shade will jog and beep twice, UPPER limit is now confirmed.

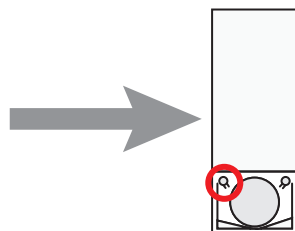
Bring the shade to the desired LOWER limit. The LOWER limit is when the shade is all the way down and the vanes are in open position. Pressing the  or  key will move the shade slightly, long press for continuous move.

 


Once the shade reaches the desired limit, press and hold  +  keys for 2 seconds.

Shade will jog and beep twice, LOWER limit is now confirmed.

### 4. SET CLOSED POSITION:

 
Bring the shade to VANES CLOSED position by pressing  or  key. Then flip the transmitter, remove the battery cover and press the programming button P1. Shade will jog and beep once.





Press  for 1 second, shade will jog once. Press  again and shade will jog one more time. FAVOURITE position is now confirmed. OPERATION: Press and hold the  key for 2 seconds and the shade will travel to FAVOURITE position.

## Motor Programming for Sheer Horizontal Shades

 

 
### 5: ADDING/DELETING A CHANNEL/TRANSMITTER:



Using already programmed transmitter single or 15 channel, remove the battery cover on the back and press and hold the  until the motor jogs.

 
 
Press  again until the motor jogs.


 
 
Select the transmitter (single channel or the channel (15 channel) to be added/deleted and then press  for 2 seconds. Motor will jog twice. New transmitter/channel is now added/deleted.



### 6. FINE TUNING UPPER/LOWER LIMIT (IF NEEDED):


 
Press  to bring the shade to its UPPER limit. Press  +  for 5 seconds. Shade will jog and enter into the fine-tuning mode.

Bring the shade to the desired position by pressing  or  key.

Press  +  for 2 seconds, motor will jog and beep twice. New UPPER limit is now confirmed.

Press  to bring the shade to its LOWER limit. Press  +  for 5 seconds. Shade will jog and enter into the fine-tuning mode.

Bring the shade to the desired position by pressing  or  key.

Press  +  for 2 seconds, motor will jog and beep twice. New LOWER limit is now confirmed.

### 7: RESETTING THE MOTOR:



Press the programming button for 15 seconds, the motor will jog four times to confirm a reset. This will erase all limits and associated transmitters.